
INSTRUCTIONS FOR PRINTING SHAMIR CENTRATION CHARTS TO SCALE

- 1. To print, go to File, then select Print..
- 2. Select Printer Name
- 3. Under the Page Handling section, navigate to Page Scaling and ensure "None" is selected in the drop down menu.
- 4. Press "OK" to prin


NOTE: If Page Scaling is set at anything other than "None," measurements may be incorrect.

9 - 1 - 11 - 15 - 15

11mm, 13mm, 15mm, 18mm and Variable minimum fitting heights
CENTRATION CHART

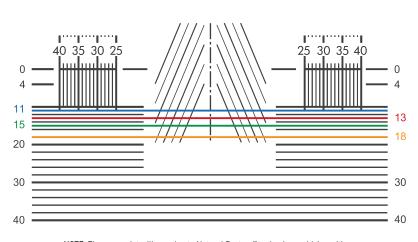

NOTE: The near point will vary due to Natural Posture™ technology, which positions the add power specific to the needs of hyperopes or myopes.

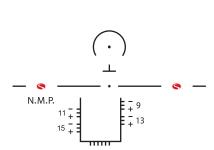

R

